


DG4 Ballast Board

(Part #6800131)

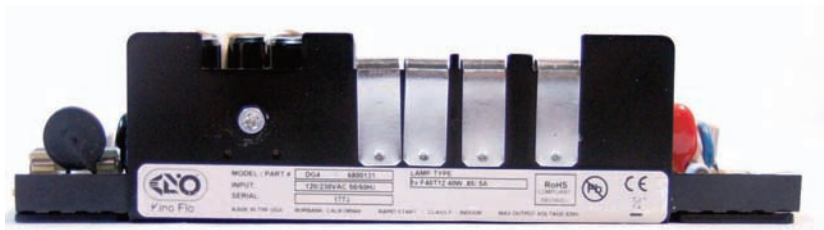

(Side View)

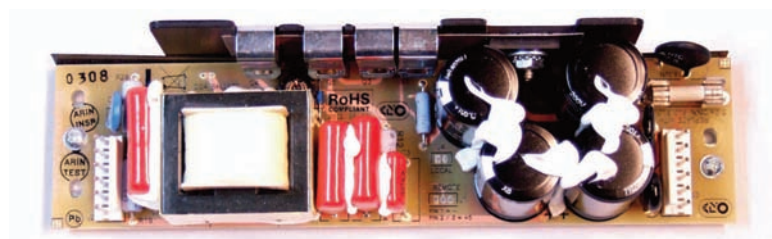

(Front View)

The **DG4** ballast board replaces all DG series ballast boards. The **DG4** is to be used as a replacement ballast board for the Foto-Flo 400. It is also backwards compatible with the DG2 and DG3 used in the Foto-Flo 400/200, Foto-Flo 44, Image 82/42 and Wall-O-Lite series products. For latest warranty information, see Kino Flo website at www.kinoflo.com.




Ballast Board Removal


Foto-Flo 400 Ballast (BAL-422-120) is shown for illustration purposes.



1) Remove eight (8) cover screws.

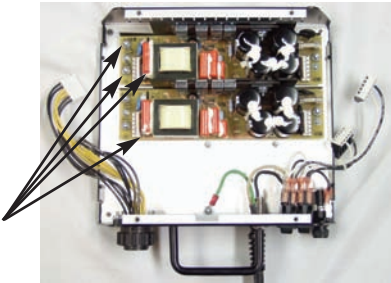


2) Remove AC input and lamp output connector.

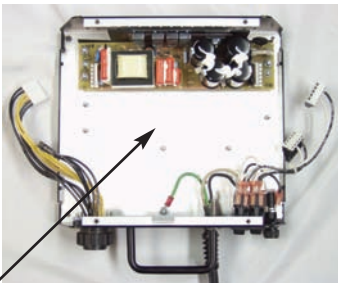


3) Remove three (3) nuts on each board and remove ballast board.

Ballast Board Installation

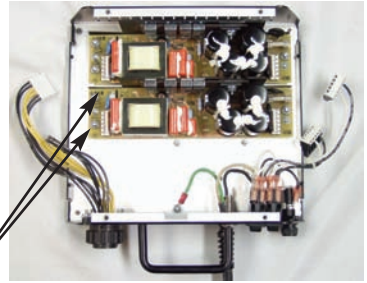

4) Install new ballast board and three (3) nuts.

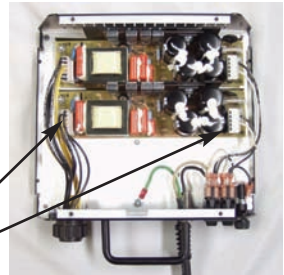

5) Install AC input and lamp output connector.



6) Install eight (8) cover screws.

Environmental: Disposal of Old Electrical & Electronic Equipment.



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. This product is made of recyclable materials and should be disposed of in accordance with local and state regulations